



Common Computer Problems and Ways to Fix Them

Isaiah Miles, Michael Qsous, Chelsea Said
Class 8H



The Screen is Blank

Solution: Unplug and reconnect your video cables

Disconnect and reconnect all of your video cables – HDMI, DVI, DisplayPort, and VGA. You can also blow into the ports to dislodge any dust that may have gotten stuck there.



The Internet is not Connecting

Solution: reconnect the wifi and the router.

Turn of the wifi on the device then turn it on again. If this does not work, unplug and replug the router to restart it.



The Computer is Overheating

Solution: clear the vents

Blow into the vents to get rid of any dust there, your computer may have removable vents to clean with a cloth.